

Kamera sucht Tasche

Taschengrößen-Übersicht für Kameras



S+M REHBERG

DIGITAL+PHOTO+MORE

www.digieTUI.de



Canon EOS 1000+ 18-55	S0	Canon PowerShot SX60	Colt2	Fujifilm XF-1	A4, T2
Canon EOS 100D	Colt2, S0	Canon PowerShot D30	T2, A4	Fujifilm XP 50/60/100/150	T1
Canon EOS 1100	Colt2, S0	Canon PowerShot N	A3	Fujifilm XQ1	H2, A2
Canon EOS 1200 +18-135	Colt2, S0	Canon PowerShot N100	A4,T2,H4	Fujifilm XS-1	S1Alt
Canon EOS 40D + 18-55	S1	Canon PowerShot N100	T2, A4	Fujifilm Z100 FD	H1, T1
Canon EOS 450 / 500 D +18-5	Colt2, S0	Fujifilm 3DW3	A4	Fujifilm Z20FD	A1, T1, H1
Canon EOS 550+18-135	Colt3	Fujifilm F300EXR	A4, H4, T2	Fujifilm Z3	H1, A1, H0
Canon EOS 550+18-55	S0, Colt2	Fujifilm F5000,5500	T2, H4, A4	Fujifilm Z30	A1, T1
Canon EOS 60 D+18-135	Colt3	Fujifilm F600EXR	T2, A4, H4	Fujifilm Z300	T1, H0, A1
Canon EOS 600 D	Colt2, S0	Fujifilm F70	T2, H2, A3	Fujifilm Z33WP	H1, A1, T1
Canon EOS 600D+18-135	Colt3	Fujifilm F700	A4	Fujifilm Z5FD	H0, T1
Canon EOS 600D+18-55	Colt2	Fujifilm F750/F660/F800 EXR	T2, A4	Fujifilm Z70	T1, H0, A1
Canon EOS 650 D / 700D + 18	Colt2, S0	Fujifilm Finepix S 2950	Colt1	Fujifilm Z700	H0, T1
Canon EOS 750D+18-55	Colt2, S0	Fujifilm Fuji Finepix S4000	Colt1	Fujifilm Z800EXR	H0, T1
Canon EOS 7D + 15-55	Colt3	Fujifilm HS 10	Colt2	Leica C	A2
Canon EOS M + 18-55	Colt1	Fujifilm HS 20	S0	Leica C-Lux 1	H1
Canon IXUS 1000 is	H2, T1	Fujifilm HS 30	S0	Leica C-Lux 2	H1
Canon IXUS 110 is	H0, T1	Fujifilm HS 50	Colt2	Leica D-Lux	Colt 0
Canon IXUS 1100	T1	Fujifilm J150W	H1	Leica D-Lux 2	H4
Canon IXUS 115/117	T1, H2, A1	Fujifilm J250	A3, H2, T1	Leica D-Lux 3	T2
Canon IXUS 125/127 HS	T1, H0	Fujifilm JX370 JX400	A1, H2	Leica D-Lux 6	Colt0, V1
Canon IXUS 130	T1, H1, A1	Fujifilm JX580	T1, H1	Leica Digilux	S1
Canon IXUS 140	T1, H2	Fujifilm JZ10	T1	Leica V-Lux	Colt2
Canon IXUS 145 /150	A3, H2, T1	Fujifilm JZ250	T1	Leica V-Lux 1	B2
Canon IXUS 155	H0, H1, T1	Fujifilm JZ500	T1, H0	Leica V-Lux 4	Colt2
Canon IXUS 200	H2, T1	Fujifilm S1800	Colt1	Leica V-Lux 40	T2
Canon IXUS 210HS	H2, T1	Fujifilm S2 Pro	S1	Leica X1	Colt0
Canon IXUS 220	H1, A1, T1,	Fujifilm S20 Pro	B2	Nikon 1 AW1	B2
Canon IXUS 230	T1, H2	Fujifilm S2000HD	Colt1	Nikon 1 J1 / J2 + 10mm	Colt0
Canon IXUS 240	H0, A1, T1	Fujifilm S2800HD	Colt1	Nikon 1 J1 10mm	Colt0
Canon IXUS 255	T1, H2	Fujifilm S3 Pro	S1	Nikon 1 J2 10mm	Colt0
Canon IXUS 265	H0, A1, T1	Fujifilm S4000	Colt1	Nikon 1 J3 10mm	Colt0
Canon IXUS 500/510 HS	H1, T1	Fujifilm S4200	Colt1	Nikon 1 J4 10mm	Colt0
Canon PowerShot A1400	A3, T1	Fujifilm S5200EXP	S0, Colt2	Nikon 1 S1	Colt0
Canon PowerShot A2100	A2, T2	Fujifilm S5500	B2	Nikon 1 V1 /V2 /V3 10-30	Colt1
Canon PowerShot A2200	H2, A3, T1	Fujifilm S5600	S0	Nikon Coolpix AW100	T2
Canon PowerShot A2300	T1, A1, H1	Fujifilm S5700	B2	Nikon Coolpix L120	Colt1
Canon PowerShot A2600	A2, T1	Fujifilm S6500FD	B2	Nikon Coolpix L19	H2
Canon PowerShot A3100	H2	Fujifilm S8100FD	B2, Colt1	Nikon Coolpix L20	H2, A3
Canon PowerShot A3300	H2, A3, T1	Fujifilm S8400	Colt2	Nikon Coolpix L21	T1, H2, A3
Canon PowerShot A3400	H2, A3, T1	Fujifilm S9400	Colt2	Nikon Coolpix L22	H2, A3
Canon PowerShot A3500	H2, A3, T1	Fujifilm S9500	S0	Nikon COOLPIX L620 , L610	V1
Canon PowerShot A4000	H2, A3, T1	Fujifilm S9600	S1	Nikon COOLPIX L820 / L830	Colt1
Canon PowerShot G15 /16	Colt0, V1	Fujifilm SL 1000	S0	Nikon Coolpix P100	B2
Canon PowerShot G7 X	Colt1	Fujifilm SL300	Colt1	Nikon Coolpix P310 /P330	T2, A4
Canon PowerShot S100	H2	Fujifilm T200	T1	Nikon Coolpix P500 /P600	Colt1
Canon PowerShot S110 S120	T2	Fujifilm T300	H2, A3, T1	Nikon Coolpix P5000	H4, A2, T2
Canon PowerShot SX 150 IS	V1	Fujifilm T400	T2, H2	Nikon Coolpix P510	Colt1
Canon PowerShot SX 160IS	V1	Fujifilm X-10 / X-20	Colt0, V1	Nikon Coolpix P5100	T2, A2
Canon PowerShot SX 170IS	V1	Fujifilm X-100	V1	Nikon COOLPIX P520	Colt1
Canon PowerShot SX 230IS	A4, H4, T2	Fujifilm X-100S	Colt0, V1	Nikon Coolpix P7100 / 7700	Colt0, V1
Canon PowerShot SX 240IS	A4, H4, T2	Fujifilm X-A1	Colt1, B2	Nikon Coolpix P7800	V1
Canon PowerShot SX 260IS	A4, H4, T2	Fujifilm X-E1	Colt1, B2	Nikon Coolpix P90	B2, Colt1
Canon PowerShot SX 270IS	A4, H4, T2	Fujifilm X-E2	Colt1, B2	Nikon Coolpix P900	B1, Colt1
Canon PowerShot SX 280IS	A4, H4, T2	Fujifilm X-M1	Colt1, B2	Nikon Coolpix S1000PG	T2, H2
Canon PowerShot SX 520	Colt1	Fujifilm X-Pro-1	S1Alt	Nikon Coolpix S1100PI	T2
Canon PowerShot SX 600HS	T2, A4	Fujifilm X-T1 (18-55)	S0 /Colt2	Nikon Coolpix S2700	H2, T1
Canon PowerShot SX 700HS	T2, A4	Fujifilm X100T	V1	Nikon Coolpix S3100	H0, T1
Canon PowerShot SX50	Colt2	Fujifilm X30	V1	Nikon Coolpix S32	A2

Nikon Coolpix S3300 / 3500	H1, T1	Olympus SH 21	T2, A4	Panasonic DMC-GF6 G14-42	Colt2
Nikon Coolpix S4100	H0, T1	Olympus SH 26MR	T2, H4	Panasonic DMC-GF6 X14-42	Colt1
Nikon Coolpix S4150	H0, T1	Olympus SP 510 UZ	B2	Panasonic DMC-GF7	B1
Nikon Coolpix S5100 / 5200	H2, T1	Olympus SP 560	B1, U1	Panasonic DMC-GH2 14-140	Colt2
Nikon Coolpix S6100 / 6150	H2, T1	Olympus SP 565 UZ	Colt1	Panasonic DMC-GH3 14-140	Colt2
Nikon Coolpix S6200	H2, T1	Olympus SP 570 UZ	Colt1, B2	Panasonic DMC-GH4 14-140	Colt2
Nikon Coolpix S6300	T1, A3, H3	Olympus SP 610 VZ	Colt1	Panasonic DMC-GM1	B1
Nikon Coolpix S6500 / S6600	H2, T1, A3	Olympus SP-820UZ	Colt1	Panasonic DMC-GX1 14-42	Colt1
Nikon Coolpix S6800/ S6900	A3, H1, T1	Olympus SP100EE	Colt2	Panasonic DMC-GX7	Colt1
Nikon Coolpix S8200	T2, A4, H3	Olympus SP610	Colt1	Panasonic DMC-L10 14-50	S1
Nikon Coolpix S9100	T2, A4	Olympus SP800/810/820	Colt1	Panasonic DMC-LF1	A2
Nikon Coolpix S9300	T2	Olympus Stylus 1	Colt0	Panasonic DMC-LX 100	B1, Colt0
Nikon Coolpix S9400	T2, A4	Olympus Stylus SP-100EE	Colt2	Panasonic DMC-LX5 , LX7	B1, Colt0
Nikon Coolpix S9500	T2, A4	Olympus SZ15 / SZ16	Colt1, V1	Panasonic DMC-S1,S2,S3	H1, H0, T1
Nikon Coolpix S9600	T2 A4	Olympus SZ30	T2, H4	Panasonic DMC-SZ1	H0, T1
Nikon Coolpix S9700	T2 A4	Olympus SZ31/SZ14	T2, A4	Panasonic DMC-SZ3	H2, T1, A3
Nikon Coolpix S9900	H4	Olympus TG-810/860/820	T2	Panasonic DMC-SZ7	H0, T1, A3
Nikon Coolpix A	Colt0	Olympus TG1 /TG3	H4, A4	Panasonic DMC-SZ9	H2, T1, A3
Nikon D200 18-55	S1	Olympus TG610 /TG620	T2, H2	Panasonic DMC-TZ25/TZ31	A4, H3, T2
Nikon D300 S 18-105	S1	Olympus VG 130	T1	Panasonic DMC-TZ41/TZ36	A4, H3, T2
Nikon D3000 18-55	S0, Colt2	Olympus VG 150/160	T1, H0	Panasonic DMC-TZ56	A4, H4
Nikon D3100 18-55	S0, Colt2	Olympus VG 170	T2	Panasonic DMC-TZ61	A4 / H4
Nikon D3200 18-55	S0, Colt2	Olympus VR 340/360	T2, A4	Panasonic DMC-TZ61/71	H4, A4, T2,
Nikon D3200 18-55	S0, Colt2,	Olympus XZ1/XZ2	Colt0	Panasonic DMC-XS3	A1, H0, T1
Nikon D5000 18-55	S0, Colt2	Olympus XZ10	Colt0	Panasonic DMC-ZX-1 ZX-3	A3, H2
Nikon D5100 18-55	S0, Colt2	Panasonic DMC-FH10	H0, A1, T1	Panasonic FZ 100 mit Bllende	Colt2
Nikon D5200 18-55	S0, Colt2	Panasonic DMC-FP7,FP5	H0, T1	Panasonic FZ 40	Colt2
Nikon D5300 18-55	S0, Colt2	Panasonic DMC-FP8	A1, H0	Panasonic G3 14-42	Colt2
Nikon D5500 18-55	S0, Colt2	Panasonic DMC-FS10	H0, T1	Panasonic GF3 14-42	Colt1
Nikon D90 18-105	Colt3	Panasonic DMC-FS11	H0, T1	Panasonic GX1 14-42	Colt1
Nikon D90 18-55	S0,	Panasonic DMC-FS16,FS18	A1, T1	Pentax K-30 18-55	S0, Colt2
Nikon DF 1,8 /50	S1	Panasonic DMC-FS25	H0, A1	Pentax K-50 18-55	S0, Colt2
Nikon DF 18-55	Colt2	Panasonic DMC-FS33	H2	Pentax K-500 18-55	S0, Colt2
Nikon L810	Colt1	Panasonic DMC-FS35,FS37	H2, T1	Pentax K-7 mit 18-55	S0, Colt2
Nikon P500	Colt1, B2	Panasonic DMC-FS40	H0, H1, A1, T	Pentax K-X mit 18-55	S0, Colt2
Nikon P510	Colt1	Panasonic DMC-FS45	H0, H1, A1, T	Pentax K10 d 18-55	S0, Colt2
Nikon P7100	Colt0, V1	Panasonic DMC-FS62	T1, H2	Pentax K110 d 18-55	S0, Colt2
Nikon P7700	Colt0, V1	Panasonic DMC-FS7	H0, T1	Pentax K200D	S1
Olympus E 5 14-42	B2, Colt1	Panasonic DMC-FT-1	H2	Pentax K20D	S1
Olympus E PL-2 14-42	B2, Colt1	Panasonic DMC-FT10/FT20	T2, H2	Pentax K5 18-55	S0, Colt2
Olympus E-M5 + 12-50	Colt2	Panasonic DMC-FTS25	H2, T1	Pentax K5II /K5 IIS 18-55	S0, Colt2
Olympus E30 + 12-60	Colt3	Panasonic DMC-FZ100	Colt2	Pentax KM mit 18-55	Colt2, S0
Olympus EPL 2 14-42	B2, Colt1	Panasonic DMC-FZ150	Colt2	Pentax KR 18-55	S0, Colt2
Olympus FH 210	T2	Panasonic DMC-FZ200	Colt2	Pentax MX1	Colt0, V1
Olympus OM-D EM1 12-50	S0, Colt2	Panasonic DMC-FZ50	S0, Colt2	Pentax Pentax K-5 II / I S 18-5	S0, Colt2
Olympus OM-D EM10 + 12-50	Colt2	Panasonic DMC-FZ62	Colt2	Pentax Pentax K-500	Colt2
Olympus OM-D EM5 12-50	S0, Colt2	Panasonic DMC-FZ72	Colt2, S0	Pentax Pentax X-5	Colt1
Olympus Pen E P3/5 +14-42	Colt1	Panasonic DMC-G1K	Colt2	Pentax X5	Colt1
Olympus Pen E PL3/5 +14-42	Colt1	Panasonic DMC-G2 14-42	Colt2	Ricoh CXR mit A12	B2
Olympus Pen E-P1+ 14-42	B2	Panasonic DMC-G3 14-42	Colt2	Ricoh CXR mit S10	B2
Olympus Pen E-P1+ 17mm	Colt0	Panasonic DMC-G5 G14-42	Colt2	Ricoh GR digital	H3, A4, T2
Olympus Pen E-P3 14-42	Colt1	Panasonic DMC-G5 X14-42	Colt1	Ricoh GR digital+Zubehör	B1
Olympus Pen E-P5	Colt1, B2	Panasonic DMC-G6 G14-42	S0, Colt2	Ricoh GX200 +DW6	B2
Olympus Pen E-PL3 14-42	Colt1	Panasonic DMC-GF-1 1,7/200	Colt0	Ricoh HZ15	H4, A4, T2
Olympus Pen E-PL5	Colt1	Panasonic DMC-GF-1 14-55	B2, Colt1	Ricoh PX	T1, H2
Olympus Pen E-PM1 14-42	Colt1	Panasonic DMC-GF2 14-42	B2, Colt1	Ricoh,CX1 - CX6	H4, A4, T2
Olympus Pen E-PM2	Colt1	Panasonic DMC-GF3 14-42	Colt1	Samsung DV150F	T1, H0, A3
Olympus Pen E-PM2 +14-42	Colt1	Panasonic DMC-GF5 G14-42	Colt2	Samsung DV300F	H0, T1
Olympus Pen EPL1+14-42	B2, Colt1	Panasonic DMC-GF5 X14-42	Colt1	Samsung EX1	Colt0
Olympus Pen EPM1+14-42	Colt1	Panasonic DMC-GF5 X14-42	Colt1	Samsung EX2F	Colt0

Samsung GALAXY Camera	Colt0	Sigma SD 15 mit 18-200	S1	Sony DSC-W560	H0, T1
Samsung GALAXY NX 12-24	S0	Sony a 230 mit 16-105	Colt3	Sony DSC-W570	H1, T1
Samsung GX10 10-17	S1	Sony a 230 mit 18-70	S0, Colt2	Sony DSC-W610	T1, H1
Samsung NX 20 /30 18-55	S0	Sony a 290 mit 18-55	S0, Colt2	Sony DSC-W620	T1, H0
Samsung NX 200	Colt1	Sony a 300 mit 18-70	S0, Colt2	Sony DSC-W650	T1, H1
Samsung NX 2000	Colt1	Sony a 3000 mit 18-55	S0, Colt2	Sony DSC-W690	H1
Samsung NX 210	Colt1	Sony a 33 mit 18-55	S0, Colt2	Sony DSC-W710	T1, H0, A1
Samsung NX10 20-50	Colt1, B2	Sony a 350 mit 18-70	S0, Colt2	Sony DSC-W730	T1, H0, A1
Samsung NX100 20-50	Colt1, B2	Sony a 380 mit 28-75 Sam	Colt3	Sony DSC-W810	T1, H1
Samsung NX1000	Colt1	Sony a 390 mit 18-55	S0, Colt2	Sony DSC-W830	T1, A1, H1
Samsung NX1000mit 18-55	B2, Colt1	Sony a 450 mit 50 Sam	S0	Sony DSC-WX1	H2, T1
Samsung NX11 mit18-55	S0	Sony a 500 mit 18-55	Colt2, S0	Sony DSC-WX10	T1, H2
Samsung NX200mit 18-55	B2, Colt1	Sony a 5000 /5100 mit 16-50	B1	Sony DSC-WX100	H0, A1
Samsung NX210	Colt1	Sony a 5000 mit 16-50	B1	Sony DSC-WX200	H1, T1, A3
Samsung NX30 mit 18-55	Colt2, S0	Sony a 55 mit 18-55	S0, Colt2	Sony DSC-WX300	T1, H2, A2
Samsung NX30 mit 30mm	Colt1	Sony a 550 mit 18-70	Colt2, S0	Sony DSC-WX350	H2
Samsung NX300 18-55	Colt1	Sony a 560 mit 18-55	Colt2	Sony DSC-WX50	H1
Samsung NX300 20-50	B2	Sony a 580 mit 18-55	Colt2	Sony DSC-WX80 / WX60	H1,T1, A3
Samsung PL10	H0, A1	Sony a 6000 mit 16-50	B2	Sony DSC-WX9	T1, H2
Samsung PL100	T1, H2	Sony a 7 / 7R / 7II mit 28-70	S0, Colt2	Sony Nex 3 +18-55	Colt1
Samsung PL150	H2, A3	Sony a 700 mit 1,4/85	S1	Sony NEX 3 N +18-55	Colt1
Samsung PL200	A4, H2, T2	Sony Alpha 3000	S0, Colt2	Sony Nex 3F +18-55	Colt1
Samsung PL50	T1, H2	Sony DSC RX100	A4, H4, T2	Sony Nex 5 +18-55 + Flash	Colt1
Samsung PL51	H2, T1	Sony DSC-G1	T2	Sony NEX 5 N +18-55	Colt1
Samsung S750	H4, T2	Sony DSC-H10	B1	Sony Nex 5N/5R+ pancake	Colt0
Samsung SL202	H1, A1, T1	Sony DSC-H20	Colt0	Sony Nex 5N/5R+18-55	Colt1
Samsung SL420	A3, H2	Sony DSC-H200	Colt1	Sony Nex 5N/5R+18-55	Colt1
Samsung ST 77	T1, H1, A1	Sony DSC-H3	T2	Sony Nex 5R +18-55	Colt1
Samsung ST100	T1, H1, A3	Sony DSC-H50	Colt1	Sony Nex 5R +18-55	Colt1
Samsung St100	H2	Sony DSC-H55	T1, H1, A1	Sony Nex 5T +1,8 /35 + Flash	B1
Samsung ST1000	H0, A3, T1	Sony DSC-H70	T2, H3	Sony Nex 5T +1,8 /35 + Flash	B1
Samsung ST150F	H0, A1, T1	Sony DSC-H90	T2, A2	Sony Nex 5T +18-55 + Flash	B2
Samsung ST200	H2, T1	Sony DSC-HX 200	Colt1	Sony Nex 5T +18-55 + Flash	B2
Samsung ST500	H2	Sony DSC-HX 20V	H2, A3, T1	Sony Nex 6 +18-55 + Flash	Colt1
Samsung ST5000	T2, H2, A4	Sony DSC-HX1	Colt1	Sony Nex 6 +18-55 + Flash	Colt1
Samsung ST550	H2	Sony DSC-HX300	Colt2	Sony NEX 7 +18-55	Colt1
Samsung ST60	T1, H1, A1	Sony DSC-HX400	Colt2	Sony NEX 7 +18-55	Colt1
Samsung ST65	T1, H2	Sony DSC-HX400V	Colt2	Sony Nex 7 +18-55	Colt1
Samsung ST66	T1, H1	Sony DSC-HX50 / 50V	H4, T2	Sony Nex 7 +18-55	Colt1
Samsung ST76	T1, H1	Sony DSC-HX5VN	T2, A4, H2	Sony NEX-5R	Colt1
Samsung ST88	H1, A1, H1	Sony DSC-HX60	H4, T2	Sony NEX-5R	Colt1
Samsung ST90	T1, H2	Sony DSC-HX7V	T2, H4	Sony NEX-F3	Colt1
Samsung ST93	H1, A1, H0	Sony DSC-RX1 / RX1 R	Colt1	Sony NEX-F3	Colt1
Samsung ST95	T1, A3, H1	Sony DSC-RX10	S0		
Samsung TL100	H0, T1	Sony DSC-RX100 M2	A4		
Samsung VN800	T1, A1, H0	Sony DSC-S210	H2		
Samsung WB1000	H2	Sony DSC-T110	T1, H0		
Samsung WB1100F	Colt1	Sony DSC-T700	A1, H0, T1		
Samsung WB150F	T2, A4	Sony DSC-T77	H0		
Samsung WB2000	A4	Sony DSC-T9	A1, H0		
Samsung WB2000/200	H2, A4, T2	Sony DSC-T90	H0, T1		
Samsung WB210	T2, A4, H2	Sony DSC-T900	H0		
Samsung WB250F	T2, A4, H3, H4	Sony DSC-TF1	A2		
Samsung WB30F	T1, H1	Sony DSC-TX 55	H0		
Samsung WB500	T2	Sony DSC-TX1	A1, H0		
Samsung WB550	T2	Sony DSC-TX10	T1, H0		
Samsung WB600	T2, H4, A4	Sony DSC-TX100V	H0T1		
Samsung WB650	T2, H4, A4	Sony DSC-TX20	H0		
Samsung WB700	T2, A4, H3	Sony DSC-TX30	H0		
Samsung WB750	T2, A4, H3	Sony DSC-TX5	H0, T1		
Samsung WB800F	T2, A4, H4	Sony DSC-TX7L	H0		
Samsung WB850	T2, A4	Sony DSC-TX9	H0		
Sigma SD 10 mit 18-200	S1	Sony DSC-TX99	H0		
Sigma SD 14 mit 18-200	S1	Sony DSC-W220	T1, A1, H1		
		Sony DSC-W270	A3, H2		
		Sony DSC-W290	H2, A3		
		Sony DSC-W300	H2, T1		
		Sony DSC-W310	T1, A1		
		Sony DSC-W320	T1, H1, A1		
		Sony DSC-W330	H0, T1		
		Sony DSC-W380	H1, A3, T1		
		Sony DSC-W390	H0, T1		
		Sony DSC-W510	H1, A1		
		Sony DSC-W530	H1, A1		



DIGITAL+PHOTO+MORE

www.digiETUI.de
info@digiETUI.de